



M4 SQUARE


Mudplate Install Guide

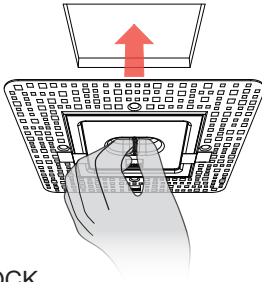


1. CUT SHEETROCK.
INSERT MUD-PLATE UNTIL FLUSH.

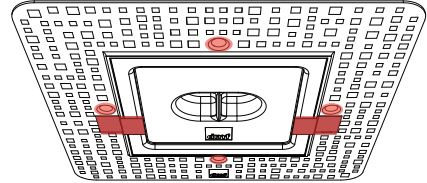


2. MOUNT WITH **INCLUDED SCREWS**.
REMOVE **TAPE**.

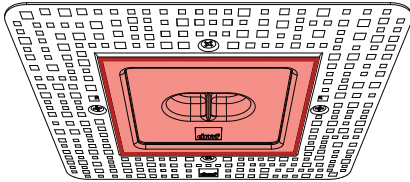


3. ENSURE COVER IS **FULLY INSERTED**
AND **FLUSH** WITH FRAME EDGE.

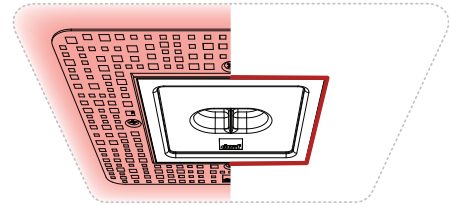

4. APPLY **MUD**.
SAND FLUSH TO **FRAME EDGE**.

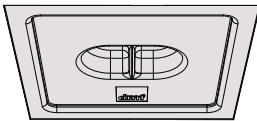

5. PAINT SHEETROCK.

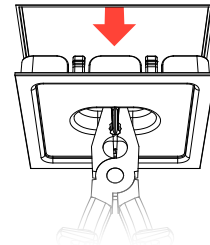

6. REMOVE IMMEDIATELY WHILE PAINT IS STILL **WET**.